

FIBER OPTIC CLEANER PEN

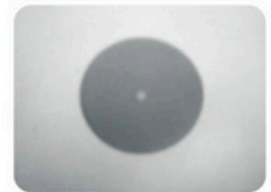
Fiber Optic Cleaner Pen is designed to specially work well with the female connectors, this instrument cleans the ferrule end faces removing dust, oil, and other debris without nicking or scratching the end face.



In Use



Before

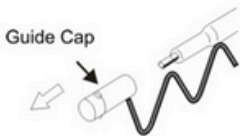
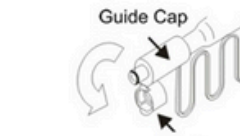
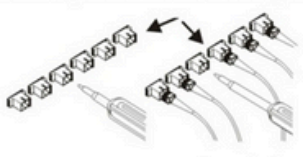
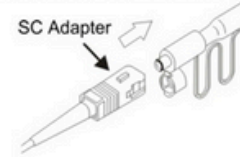
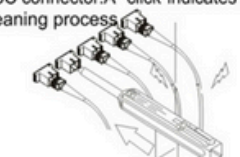
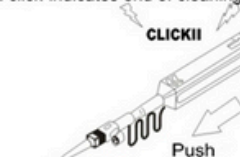


After

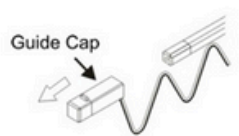

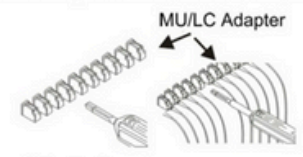
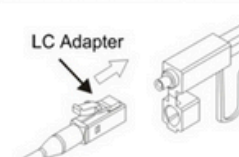

Ordering

- FC/SC/ST Cleaner Pen, universal 2.5mm;
- LC/MU Cleaner Pen, universal 1.25mm.

FC/SC/ST Application

<p>1. Remove Guide Cap from the device.</p> 	<p>1. Open the Cover on the Guide Cap.</p> 
<p>2. Insert tip of cleaner into SC Adapter.</p>  <p>Standard Extended</p>	<p>2. Insert connector into the Guide Cap.</p> 
<p>3. Push the Outer Shell to start cleaning the SC connector. A "click" indicates end of cleaning process.</p> 	<p>3. Push the Outer Shell to start cleaning A "click" indicates end of cleaning process.</p> 

MU/LC Application

<p>1. Remove Guide Cap from the device.</p> 	<p>1. Open the Cover on the Guide Cap.</p> 
<p>2. Insert tip of cleaner into MU Adapter.</p>  <p>Standard Extended</p>	<p>2. Insert connector into the Guide Cap.</p> 
<p>3. Push the Outer Shell to start cleaning A "click" indicates end of cleaning process.</p> 	<p>3. Push the Outer Shell to start cleaning A "click" indicates end of cleaning process.</p> 